


Instructions for Rackmounting your Rockmodules

If you have attached the rubber feet to your Rockmodule(s), you must remove them before installing the Rockmodule(s) into the Rackmount.

1. Put power cord through Rackmount.
2. Place Rockmodule(s) in the Rackmount so that the lip in the Rackmount fits into the groove in the Rockmodule(s).
3. Install two (2) of the special screws from the under side of the Rackmount into the threaded holes in the Rockmodule. ***WARNING: Use only the screws supplied with your Rackmount. Longer screws will cause mechanical and electrical malfunctions in the Rockmodule.** For your convenience we have provided one (1) extra screw.

***NOTE:** If the special installation screws are lost, only replace them with #6-32 x 1/4" flat head screws.

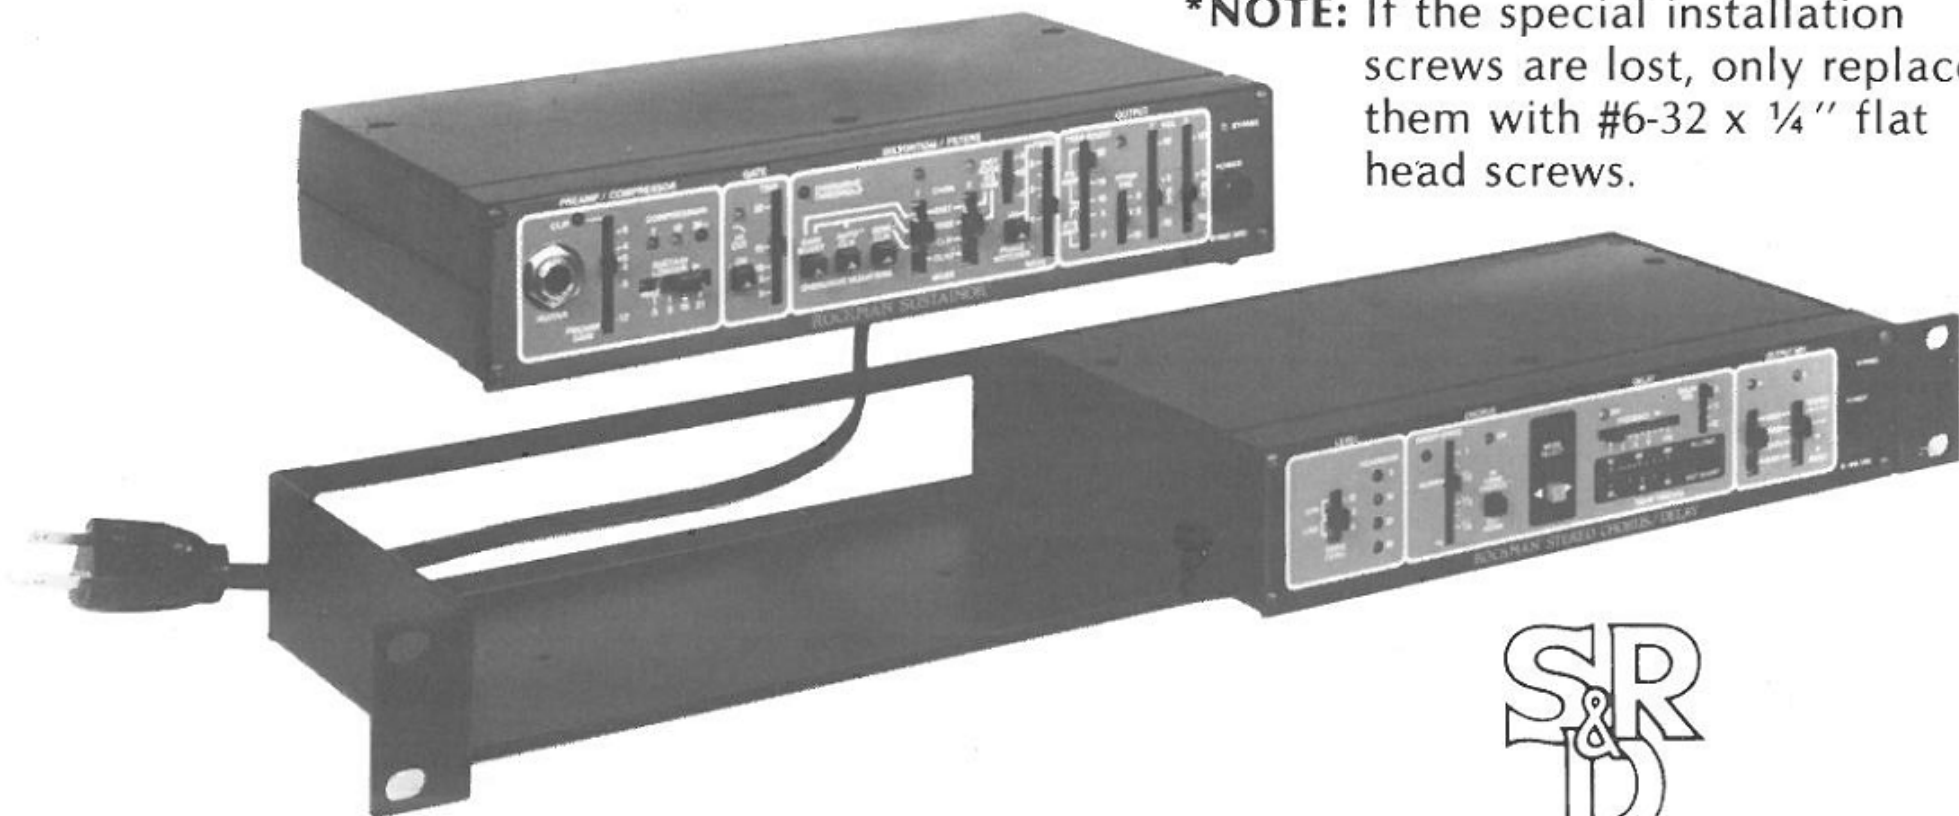

Scholz Research & Development, Inc.